

**DALI potentiometer with integrated power supply unit**

Order No. : 2028 00

**DALI potentiometer**

Order No. : 2018 00

**Operating instructions****1 Safety instructions**

Electrical devices may only be mounted and connected by electrically skilled persons.

Serious injuries, fire or property damage possible. Please read and follow manual fully. These instructions are an integral part of the product, and must remain with the end customer.

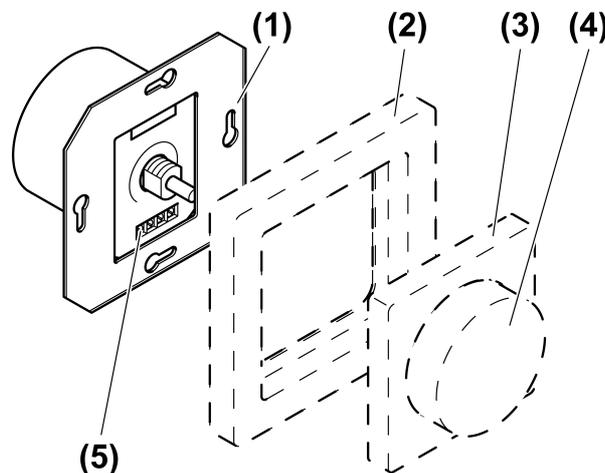
**2 Device components**

Figure 1

- (1) DALI potentiometer
- (2) Frame
- (3) Central plate
- (4) Control knob
- (5) Screw terminals

**3 Function****Intended use**

- Brightness setting for luminaires with DALI interface
- Installation in appliance box according to DIN 49073

**Product characteristics**

- The DALI potentiometer with power supply unit supplies the control current for 26 DALI subscribers.
- The DALI potentiometer without a power supply unit is powered using the DALI voltage and serves as an additional control section.
- Parallel switching of up to four DALI potentiometers with power supply unit with the option of supplying up to 104 DALI subscribers.

- All the control sections have the same functionality.
- Saving of a basic brightness and a fixed switch-on brightness.
- i** To ensure fault-free operation, do not combine the device with other DALI controllers.

#### **Behaviour after a mains voltage failure**

When the mains voltage returns, the lighting is switched to the brightness present before the mains voltage failed.

## **4 Operation**

- i** Operation can take place from multiple control sections and always applies to all the connected subscribers, broadcast.

#### **Switch light**

- Press the control knob.
- i** When switching on, either the brightness present prior to switching off is switched to or to the saved switch-on brightness.

#### **Adjust the brightness**

- Turn the control knob.
  - Turn slowly = Brightness change small
  - Turn quickly = Brightness change great

#### **Save switch-on brightness**

If the lighting is not always to be switched on with the same brightness, then this can be saved as a switch-on brightness.

- Switch on light.
- Set the required brightness.
- Press the control knob briefly twice in succession (double-click).
  - The lighting briefly switches to maximum brightness twice. The switch-on brightness is saved.
- i** If the lighting switches off after the double-click, then the time between the first and second presses was too long.

#### **Delete switch-on brightness**

- Switch the light off.
- Press the control knob briefly twice in succession (double-click).
  - After about 2 seconds the lighting switches to maximum brightness.
  - The switch-on brightness has been deleted.

## **5 Information for electrically skilled persons**

### **5.1 Mounting and electrical connection**



#### **DANGER!**

**Electrical shock when live parts are touched.**

**Electrical shocks can be fatal.**

**Before carrying out work on the device or load, disengage all the corresponding circuit breakers. Cover up live parts in the working environment.**

---

## Connecting and fitting the device

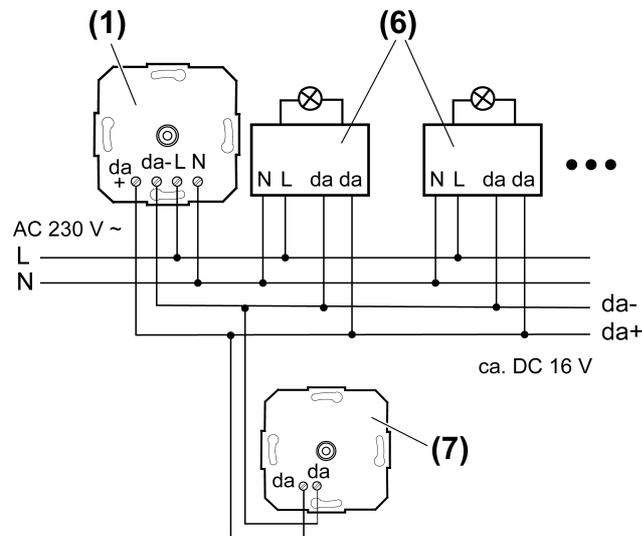


Figure 2

- (1) DALI potentiometer with power supply unit
- (6) DALI subscriber e. g. DALI electrical ballast
- (7) DALI potentiometer without power supply unit
  - Connect the DALI potentiometer and DALI electrical ballast according to the wiring example (Figure 2). In so doing, observe the data of the electrical ballast manufacturer.
  - When switching multiple DALI potentiometers with a power supply unit in parallel, ensure correct polarity.
  - If multiple circuit breakers supply dangerous voltages to the device or load, couple the miniature circuit breakers or label them with a warning, to ensure disconnection is guaranteed.
- i** Ensure that the control cable is of the appropriate type, cross-section and routing for the VDE specifications for 250 V cable, control voltage has basic insulation.
- i** The control cable and load cable can be run in a shared cable, e.g. NYM J 5×1.5.
- i** The connected DALI subscribers may be operated on different phases.

## 5.2 Commissioning

### Saving a basic brightness

The basic brightness should be a state when turning the DALI potentiometer does not directly lead to an increase in brightness.

- Set lighting to minimum brightness.
  - Turn the DALI potentiometer to the point that where the brightness begins to increase.
  - Press the control knob for longer than 10 seconds.
- The lighting switches briefly off and on again. The basic brightness is saved.

### Deleting the basic brightness

- Switch the lighting off.
- Press the control knob for longer than 10 seconds.

Briefly switch the lighting to maximum brightness and then off again. The basic brightness has been deleted.

- i** DALI subscribers of different manufacturers may deviate from the acknowledgements given here.

## 6 Appendix

### 6.1 Technical data

#### **DALI potentiometer with integrated power supply unit, Order No. 2028 00**

Rated voltage	AC 230 V ~
Mains frequency	50 / 60 Hz
Power consumption	max. 2 W
Ambient temperature	-5 ... +45 °C
DALI rated voltage	DC 16 V (typ.)
Output current	max. 52 mA
Connection	
single stranded	max. 4 mm <sup>2</sup>
Number of DALI subscribers	max. 26
Number of active DALI potentiometers	max. 4

#### **DALI potentiometer, Order No. 2018 00**

Ambient temperature	-5 ... +45 °C
Current consumption	max. 2 mA
Connection	
single stranded	max. 4 mm <sup>2</sup>

### 6.2 Warranty

The warranty follows about the specialty store in between the legal framework as provided for by law

Please submit or send faulty devices postage paid together with an error description to your responsible salesperson (specialist trade/installation company/electrical specialist trade). They will forward the devices to the Gira Service Center.

**Gira**  
**Giersiepen GmbH & Co. KG**  
 Elektro-Installations-  
 Systeme

Industriegebiet Mermbach  
 Dahlienstraße  
 42477 Radevormwald

Postfach 12 20  
 42461 Radevormwald

Deutschland

Tel +49(0)21 95 - 602-0  
 Fax +49(0)21 95 - 602-191

[www.gira.de](http://www.gira.de)  
[info@gira.de](mailto:info@gira.de)